



TRUE COLD[®]

A/C PERFORMANCE BOOSTER

APPLICATION SHEET

Truth - Application / Directions

Always Practice Shop Safety Precautions. Use extreme caution when working around a running engine. Wear eye and hand protection. Properly ventilate exhaust fumes.

Before performing the service verify the vehicle is in good running condition and the HVAC system is in good working condition.

Prep the Tool:

1. Attach the yellow hose for R1234yf or the blue hose for R134A to the tool.
2. Turn the tool base counter clockwise until it is just below the 1.5 oz mark.
3. Unscrew the fill cap from the base of the tool. Once removed, place on clean, lint-free towel; DO NOT allow it to become contaminated.



Add the Product to Tool:

4. Shake well for one minute.
5. Pour the contents of the bottle into the tool.
6. Reattach the fill cap to the base of the tool.
7. Turn the tool clockwise until you feel resistance.



Contact True Brand or your rep for more information.





TRUE COLD[®]

A/C PERFORMANCE BOOSTER

APPLICATION SHEET

Attach Tool to Low Pressure Port:


8. Locate the low pressure port (suction port). This port is identified by the larger diameter line. (The high side is the smaller diameter line). Remove the cap. Don't lose it!
9. Attach the tool's quick connect fitting to the port. You should feel it click in place when it is properly attached.
10. Properly attached quick connect.



Install the Product:

11. Start the vehicle.
12. Turn the A/C on to Max or set the climate control to its lowest temperature setting.
13. Slowly turn the tool clockwise to insert the product. When the tool bottoms out the product is installed.

PRO TIP: If the tool resistance when turning is excessive it means the quick connect is not fully seated onto the low side port and not depressing the Schrader Valve.

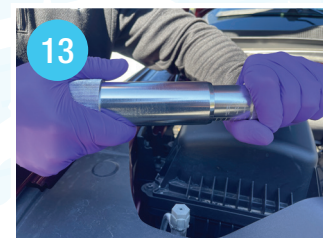

Button Up:

14. Turn the vehicle OFF. Release the quick connect fitting from the low pressure port.
15. Reinstall the cap.



NOTE: Treatment is fully effective after 2.5 hours of A/C run time. For best results, customer should run A/C for a minimum of 30 minutes after treatment.

Contact True Brand or your rep for more information.



We're the Manufacturer!



Toll Free 877-290-3950



www.SolidStart.com